

New Zealand – Self Contained

Polaris 4

Mercedes





P4 vehicle **MANUAL**

Contents

Description of Keys	3
Vehicle Equipment.....	4
Starting the Vehicle	5
Windows & vents.....	6
Entry Door	7
Outdoor Step	8
Seat Belts	9
40-Volt electrical system	10
12-volt electrical system	11
Microwave	12
Freshwater tank and water access.....	13
Greywater Tank	14
Water Pump.....	15
Hot Water heater.....	16
Toilet Use.....	17
Toilet Cassette	18
Gas Bottle	19
Stove Top & Grill.....	20
Heater	21
Fridge	22
Lights	23
Television	24
Bed Conversion	25
Awning	27
Diesel Fuel	29
Jack & Spare Tyre	30
Barbecue.....	32
Additional Information.....	3
Dash warning lights 2018 model.....	



Description of Keys



IGNITION KEY:

Turn the key in the ignition barrel and release once the engine starts.



SIDE ENTRY DOOR:

Use this key to lock or unlock the vehicle's side entry door lock.



TOILET CASSETTE COMPARTMENT:

Use this key with THETFORD engraving to lock or unlock the vehicle's toilet cassette compartment.



EXTERNAL STORAGE COMPARTMENTS:

Use this key to lock or unlock the vehicle's external storage compartments.

Please note: This key is applicable to LP Gas compartment on rear driver's side, storage compartment on rear passenger's side and small storage compartment beside driver's cabin door.



WATER TANK/GAS LOCKER/OUTDOOR SHOWER:

Use the small round silver key to lock or unlock the vehicle's freshwater filling point.



Vehicle Equipment



FIRE EXTINGUISHER

Each vehicle is equipped with a dry chemical fire extinguisher, selected to address both type B fires (involving grease and liquids) and type C fires (involving electrical elements).

To deploy the extinguisher effectively, grasp the ring situated at the top of the bottle, direct the nozzle towards the base of the flames, and press down the lever firmly. Guide the nozzle from side to side to cover the entire width of the base of the flames.

* A fire extinguisher is attached to the interior of the vehicle, behind the back seats



SMOKE ALARMS

Each vehicle is furnished with a smoke alarm, serving as a crucial element for your safety and security. This alarm is powered by a replaceable 9-volt battery. Should a replacement be warranted during the duration of your rental, kindly procure a new battery, retain the receipt and upon vehicle return, reimbursement will be facilitated accordingly.

***Do not disconnect the smoke alarm. It must be connected at all times for your safety.**

GAS ALARM

Each vehicle has a 'harmful gas' alarm located behind the rear cabin seats. In the event there is high levels of harmful gas, the alarm will beep, and a red light will indicate.

When this happens, open all windows and move to fresh air.





Starting the Vehicle

Gear stick in parking mode



Gearstick must be in PARK and your foot on the pedal for the vehicle to start.

The dashboard will display a 'P' indicating the vehicle is in Park. Start the vehicle using the ignition start/stop button.

Gear stick in driving mode



With your foot still on the brake pedal, pull the gear stick down into the 'D' position. The dashboard will display a 'D' indicating the vehicle is in Drive.

Disengage the hand brake by pulling up slightly with the button held. The hand brake will start to move down.

To engage the handbrake, pull the button towards you. A white light will appear.



CAUTION – Handbrake is on the left, beside the driver's seat. Do not forget to disengage the hand brake before you drive.

Try our online help hub.



Helphub.starrv.com helphub.jucy.com

P4 vehicle **MANUAL**

Windows & vents



WINDOWS

To open the windows on board your vehicle, turn the handles inwards. Push the window out and click the latch in place. The window has a mosquito net and a sun blackout blind, pull the blind up using the handle indents

VENT

Stand facing the driver's cabin.

Grip the middle handle and twist so the hooks move out of the lock. Then push towards the driver's cabin until it stops.

To close the vent, twist and pull until it closes completely.



Entry Door



The entrance door may be opened from outside the vehicle by pulling the door handle outward.

To open the door from the inside, pull the door handle downwards and apply slight pressure to the door. When the door is locked, neither the inside nor outside door handle can be operated.

To lock the entry door from the outside, turn the key anticlockwise towards the lock symbol on your entry door lock. To unlock the entry door, turn the key clockwise towards the unlock symbol on your entry door lock.



Try our online help hub.



Helphub.starrv.com helphub.jucy.com

P4 vehicleMANUAL

Outdoor Step



Your motorhome is equipped with a manual side doorstep.

To use, simply grip the middle of the step and pull out until it locks into place.

To close, push it towards the cabin until it clicks back into place.



Please note: Do NOT leave the step out while driving as this may cause damage to the cabin exterior, plus the step or surrounding objects.



Seat Belts



It is the law in New Zealand that all passengers in a motorhome must be properly restrained with seatbelts. Vehicles are equipped with both lap and shoulder belts.

Only seats fitted with seatbelts can be occupied while the vehicle is moving.

To use, insert the belt tongue into the correct buckle until you feel it click and latch.

The two anchor points for baby seats are located behind the large back squab. There is no Isofix available.

Please note: The table must always be removed while passengers are sitting at the dinette seats while in transit.



40-Volt electrical system



To run the microwave, power points and to recharge the house battery, connect the motorhome's 15AMP electricity cord to a 240-volt external power source. The listed devices will only work if you are connected to 240-volt power.

It is recommended that every second night, the vehicle is charged at a power outlet to keep batteries charged.

You will know that the 240-volt is working by the microwave turning on and displaying a clock.



The motorhome connects to powered outlets at caravan parks.

The 240-volt outlets and appliances inside the motorhome are protected by two circuit breakers. This device is intended to protect you from electrical shock hazards when you are using electrical appliances. If you experience a power surge where the circuit breakers trip, locate the circuit breakers outside of the motorhome and switch them back to 'ON/UP' position.

Overloading the 240-volt system will cause the circuit breakers to turn off. This can happen if using multiple 240-volt items at once.

Troubleshooting: If you are having trouble with the 240-volt not working:

- Check the 240-volt cord is connected to the power site and motorhome properly
- Make sure the circuit breakers on both the power site and motorhome haven't tripped
- If the above options are correct, try to change the 240-volt cord (can usually hire from a campsite) or try an alternative power site.
- If none of the above work, please call the Star RV helpline



12-volt electrical system

Your motorhome has two batteries, one in the engine compartment and one under the passenger's seat. The battery inside the cabin is also called the auxiliary battery.

The auxiliary battery operates the TV, water pump, fridge and interior lights, extractor fan and toilet. It is charged by both the alternator when the vehicle is being driven and the 240-volt system when it is plugged into a mains power source.

The 12-volt electrical panel is located on the side wall, just above the domestic switches. The needle should stay in the green section.

The more appliances you use, the faster the power will drain from the battery.





Microwave



The microwave in your motorhome will only operate via 240-volt power. This means that you must be plugged into an external power source.

When you are using the microwaves, please be aware that there are certain materials that must not be put in the microwave.

NOT Recommended

- Paper bags are a fire hazard – except the obvious like popcorn bags which are designed to be microwaved.
- Aluminium foil
- Never use dishes with metal rims
- Plastic containers – can melt
- Wire ties from bread and metal utensils
- Styrofoam plates and cups – can melt
- Glass jars – can shatter

Recommended

- Microwave approved glass, ceramic plates and bowls
- Microwave browning dishes
- Microwave plastic wrap, wax paper, paper towel and napkins
- Paper plates and cups

Troubleshooting the Microwave

Problem: Microwave is inoperative and there is no display

Possible Cause: 240-volt power is not plugged into an outlet. Check that the vehicle is connected to mains power and that the powered outlet is in working order.

Problem: Microwave is operable (light on, turntable working) but it is not heating food

Possible Cause: Microwave may be broken. Please call the Star RV on-roads team for assistance

Problem: Sparks when the microwave is turned on

Possible cause: Metal object in the microwave



Freshwater tank and water access



Onboard the vehicle is a freshwater system consisting of a water pump and freshwater tank. The water tank has a 120L capacity and is located on the passenger side of the vehicle. This water is for the sink, shower and toilet flush.


Your motorhome comes with a freshwater hose, used to fill up the tank. When the tank is full, the water will overflow out of the water inlet.

Please note: you can check the level of your water on the domestic switchboard by pressing the test button. The green light will indicate how full the water is.





Greywater Tank

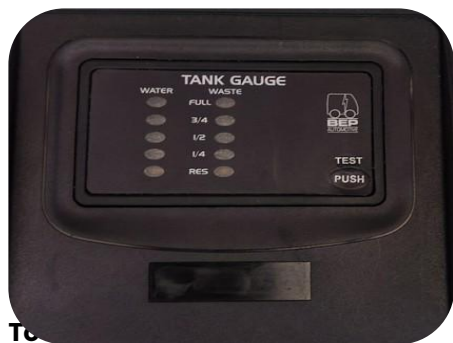

The greywater holding tank collects wastewater from the kitchen, bathroom sink and shower. You can see the level of your water on the Domestic panel switchboard. This is labelled 'waste'

Is it not uncommon for the greywater level indicator to give an inaccurate reading. It may show 100% even if it is empty. We recommend emptying your greywater tank as regularly as possible.

To Empty Tank

1. Collect the greywater hose from the storage compartment.
2. Connect the hose to the outlet. Make sure it is firmly attached by pulling down the silver levers on each side of the attachment.
3. Place the other end of the hose into a dump station disposal opening.
4. Open the tank by turning the red lever towards you so it is parallel with the pipe and wait for it to empty.
5. Once the greywater is empty, close the lever and remove the hose and stow it away in the storage compartment





Water Pump

To use water on board the vehicle, ensure there is water in your freshwater tank outside. On the switchboard, push the PUMP switch down. You will hear the pump quietly start.

The pump operates as part of the 12-volt system, when you are not using the water pump ensure it is turned off.

You must have this button on to operate the kitchen tap, shower and toilet flush.

Please note: Avoid running the pump when the water tank is empty. Operating the pump continuously with no water can cause damage.

Caution: Do not drink the water from the tap unless it's boiled first.






Hot Water heater

To operate the water heater in your vehicle:

1. Turn the gas bottle valve on (located in the side panel on the driver's side). Twist anti clockwise to open and clockwise to close
2. Turn on the 'water heater's switch. The red light next to the switch will illuminate and the boiler will ignite.

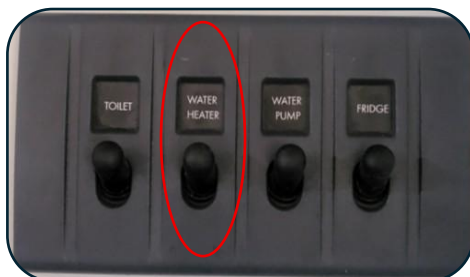

3. Once the boiler has ignited with a successful flame, the **red light will dim**, and the water will take approx. 30-40 minutes to heat.

Please note: your motorhome is additionally fitted with a 240-volt hot water system. When connected to mains power, this system will automatically activate and start heating the water. If the water has already been heated via the 240-volt mains power, the gas operation for hot water will be inactive.



Toilet Use



1. Turn on the water pump on the control panel
2. Push the blue button on the toilet to fill the base with water.



3. Once finished, adjust the lever on the bottom of the toilet to empty into the cassette.



4. Ensure the lever is in the closed position after use



Toilet Cassette



It is highly recommended to regularly empty the toilet cassette, and it is mandatory to empty and clean it before returning the vehicle to the depot.

To empty the cassette

Make sure the grey flush lever on the toilet is in the closed position. Lift the blue lever and remove the entire cassette from the vehicle.

1. Head to the dump station and unscrew the blue lid on the toilet cassette
2. After emptying the toilet cassette, rinse it thoroughly and repeat the emptying process. Then, add a toilet chemical along with half or a litre of water.
3. Insert the cassette back into the locker



Please note: It is crucial for the cassette to click back into position to align with the toilet above.



Gas Bottle



The gas bottle is located on the exterior of the vehicle in a locker marked by a L.P Gas Storage label.

IMPORTANT: Never drive with the gas bottle turned to the 'open' position.

To open the gas bottle, rotate the valve fully in an anticlockwise direction. To close the gas bottle, turn the valve on top of the gas bottle clockwise until it's securely tightened.

Gas bottles can either be filled at Gas stations that sell LPG or Swapped for a full bottle.

If you detect the smell of gas:

1. Extinguish all open flames and smoking materials.
2. Refrain from touching any electrical switches.
3. Shut off the gas supply at the gas bottle using the valve on top of the bottle.
4. Open doors, windows, hatches, and any other ventilation openings.
5. Evacuate the area until the gas odour dissipates.
6. Contact STAR RV for assistance.



Stove Top & Grill

Warning: It is not safe to use cooking appliances for comfort heating.



How it operates

The motorhome is equipped with 1 electric ring, 2 gas hobs and a gas oven which used LPG. The basic operation is the same as a gas oven in a house however, the amount of oxygen in a motorhome is limited due to its size therefore always have sufficient ventilation when using this appliance.

Using the Stove Top

1. The stove top in the motorhome has an igniter switch. Before using the igniter, make sure the domestic switch labeled 'STOVE IGN' is on.
2. Locate the gas bottle on the outside of the van and turn the valve on top of the gas bottle fully to the 'open' position.
3. The glass lid must be fully upright. If your lid is partially open, the burners will not work
4. Push in, hold down and turn the burner knob to your desired heat level
5. Whilst the burner knob is still pushed in, press the igniter switch until the gas lights. Keep holding the burner knob in.
6. Wait approximately 15 seconds before slowly releasing the burner knob.

Please note: If the flame extinguishes, the burner knob may have been released too soon. Start from step 3 and try again.

To operate the electric hob, make sure you are plugged into a powered campsite and that the hob switch is on, next to the stove.

If using a match

Danger: Misuse of the gas stove can result in fire and explosion in a motorhome/campervan just as it can in a kitchen. Use extreme caution when lighting the stovetop burners with a match. To prevent too much unburned gas from accumulating, first light the match, hold it next to the burner then open the burner valve.

If the stove does not ignite there may be insufficient power in the battery to provide a spark. You must connect to mains power or alternatively, use a match to light the stove.

Please note: the stove top lid must be in a fully upright position for the hotplate and grill to ignite.



P4 vehicleMANUAL

Heater



To operate, make sure you have sufficient charge of the domestic battery (check that the needle is in the green area of the voltage meter).

Rotate the dial clockwise to the desired setting. You might hear a small “whoosh” as the gas ignites. The fan will start to blow air in about 30 seconds; heat should start flowing after 90-120 seconds.

Adjust the digital setting to suit your comfort, and the heater will cycle on and off to maintain the set temperature.

Sequence of operations: 1- Switch on

2- Heater motor starts 20 second pre-purge to clear gases from heat exchanger

3- Gas valve opens Spark generator operates

4- Motor speeds up to normal operating speed

5- Heater switches off when thermostat temperature reached 6 - Post Purge – fan runs on its own for 3 minutes

7- Temperature drops

8- Cycle repeated

Troubleshooting common issues

Problem	Possible Cause	What to Do
No ignition	Low battery or gas not on	Check gas supply and battery
Heater clicks but no heat	Air in gas line or blocked vent	Purge line, check vents
Blowing cold air only	Set temperature too low	Increase the temp on the dial
Unit won't power on	Blown fuse or power off	Check fuses and 12V system



Fridge



Fridge is operated on the domestic battery and 240-volt hook up. Make sure the domestic switch is on. Once you plug into a powered campsite, the fridge will automatically switch to 240-volt.



To adjust the temperature, rotate the dial to the desired number (higher the number, the colder the fridge)

Please note: the higher number means the fridge will use more power. Optimal operating is between 4-5.

Fault

Fridge not cold

Compressor makes short start attempts

Possible Cause

- No power supply
- low battery
- faulty fridge
- Bad power supply
- too low voltage or a voltage drop during start attempts,
- discharged batteries

Action

Check switch is on, and that the domestic battery has over 10v power
Charge batteries, run the engine or connect battery charger or plug into powered campsite


Please note: if above action fails, please call Star RV helpline



Lights



To use the cabin lights, turn on the light switch in the domestic control panel by holding the power button.

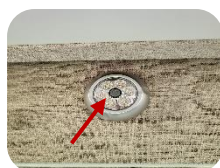

Some lights can be individually switched off. Switches are located on the lights themselves

Alternatively, you can control a section of lights using the light switches located by the cabin door and the bathroom door.



Television

Each vehicle is fitted with a DVD/Television for your entertainment. The TV operates on both 12-volt and 240-volt mains power.

Kindly note that television reception may vary in rural areas and the TV reception works a lot better when plugged into a powered campsite. We highly recommend bringing your own DVDs to utilize with the in-built DVD player for uninterrupted entertainment.





Bed Conversion

There are three double beds on board your motorhome. To make up each one, please follow these instructions:

BED 1 (middle dinette)

Step 1: Remove the tabletop from the wall by pushing the clips down. Fold the leg and store it behind the front passenger seat.



Step 2: Put aside the middle squab highlighted below



Step 3: Pull out the frames



Step 4: Place the tabletop between the seats, then put the middle squabs over the table. Position the long squab over the frames.





BED 2 (rear dinette)

Step 1: Set up the back bed by removing the back cushion and storing it on the floor.



Step 2: Then, press the button on the side of the bench to lower the bed. Lower the bed until it stops on top of the bottom cushion.



Step 3: Press the button up to retract the bed back to the roof.





Awning

To roll out the awning:

1. Release the 2 hooks from the bolts at the top of the awning arms by pushing them up with the pole.



2. Extend both awning arms fully until they reach the ground, then engage the locking clips to secure them in place



3. Using the pole, hook into the eye bolt in the middle of the awning and pull away from the motorhome.



Try our online help hub.



Helphub.starrv.com helphub.jucy.com

P4 vehicle **MANUAL**

To retract the awning:

1. Disengage the locking clips on both awning arms.
2. Carefully fold each arm upward, guiding it back into its mounting bracket.
3. Insert the pole's hook end into the eye bolt on the awning rail.
4. Twist the pole clockwise to wind the awning neatly and secure it in place.






Diesel Fuel

The vehicle accepts diesel fuel only. DO NOT refill the motorhome with any other fuel or fluid. The diesel tank cap is marked with DIESEL on it and is unlocked using the vehicle diesel key. The fuel filling location is located next to the passenger door. Simply open the lid using your hands, then use the diesel key to unlock. Turn the key anticlockwise to unlock the cap.

Once filled with diesel, place the fuel cap on the inlet and turn the key clockwise to lock it.

IMPORTANT: The vehicle accepts diesel fuel only. If you fill the vehicle with unleaded, water or AdBlue, please do not start the engine and call STAR RV Roadside Assistance immediately.

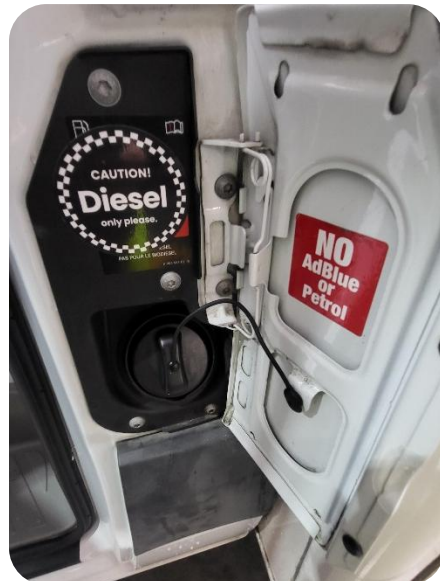



Jack & Spare Tyre

The jack is located on the floor, in front of the passenger seat. To access the compartment, use a butter knife or any similar tool to gently unscrew the compartment cover.

Once removed, you will find the jack tools inside.



The spare tyre can be found underneath the rear of the vehicle. To access it, use the provided tool. Be sure to follow all safety precautions when handling the spare tyre.



Try our online help hub.



Helphub.starrv.com helphub.jucy.com

P4 vehicle MANUAL

Additional Information

Tyre size	205/75 R/16C
Tyre pressure	60 PSI
Oil type	5W30
Coolant type	Red Coolant (any brand)



P4 vehicleMANUAL

Barbecue

Step 1: To set up the barbecue, pull it out and grab the orange pipe. Align the gas valve with the gas inlet and insert it.



Step2: Twist down until the line of the red valve aligns with the top of the valve. Make sure your gas is turned on at the bottom.





P4 vehicleMANUAL

Dash Warning lights – 2018 model

Warning Light Symbol	Warning Light	Description	What to Do if the Light Comes On
	Brake Warning (Red)	Handbrake engaged or low brake fluid. If with ABS light, brake fault.	Pull over safely & avoid sudden braking. If the light comes on with ABS light, stop immediately & contact Roadside Assistance.
	ABS Warning (Amber)	ABS fault – brakes work without ABS. If with brake light, possible brake failure.	If on alone, drive cautiously & check as soon as possible. If with brake light, stop immediately & call Roadside Assistance.
	Electronic Stability Control (Amber)	Traction control fault; flashing = active, constant = fault.	Drive with caution. Restart engine; if still on, contact Roadside Assistance.
	Electronic Brakeforce (Amber/Red)	The braking system has malfunctioned	You can still drive very cautiously & contact Roadside Assistance.
	Airbag/SRS (Red)	Fault in airbag or seatbelt system.	Contact Roadside Assistance.
	Coolant Overheat (Red)	Engine overheating – possible low coolant or leak.	Stop immediately & contact Roadside Assistance.
	Power Steering (Amber/Red)	Overheated or failed steering assist.	If red, take extra care steering. Pull over & contact Roadside Assistance.



P4 vehicleMANUAL

	Battery Charge (Amber/Red)	Battery not charging.	Contact Roadside Assistance.
	Oil Pressure (Red)	Low oil pressure or high oil temp.	Stop immediately & contact Roadside Assistance.
	Engine Management (Amber)	Fault with engine or emissions.	Continue to destination & then contact Roadside Assistance.
 	Immobilizer (Amber)	Anti-theft fault or key battery issue.	Continue driving & contact Roadside Assistance.
	Tyre Pressure (Amber)	Low tyre pressure or puncture	Inflate to spec; if flat, stop & call Roadside Assistance.
	Glow Plugs (Amber)	Fault with glow plugs or relay	Safe to drive short term – contact Roadside Assistance.
	AdBlue (Red)	The AdBlue additive level is low	It is safe to drive for a short distance. top up with AdBlue fluid asap. The AdBlue cap is next to the fuel filler cap and is blue. DO NOT PUT ADBLUE INTO THE FUEL. Always fill the Adblue tank with at least 5 litres of AdBlue.
	Diesel Particulate Filter (Amber)	DPF regenerating or blocked.	Continue driving for 15 mins & if persists, call Roadside Assistance.
	Windshield washer fluid (Amber/ Yellow)	Windshield washer fluid level is low	Fill up with fresh water when convenient. The filler bottle is under the bonnet and has a blue cap
	Maintenance	The vehicle is due or close to scheduled service and maintenance.	This is just an indication that the service is approaching. This service can be carried out when you return the vehicle.



P4 vehicleMANUAL

	Warning Triangle (Yellow)	• Fuel Inertia Cut-Off Switch Activated • Lights Failure: rear fog lamps, indicators, brake lights, number plate lights, side lights, daytime running lights, main beam • Airbag Warning Light Failure • Rain Sensor Failure • Diesel Filter Sensor Failure • Engine Oil Pressure Sensor Failure • Parking Sensor Failure • Water in Diesel Fuel Filter • Engine Oil Level Sensor Failure • Insufficient Engine Oil Level • Low Engine Oil Pressure Warning Light Failure	Continue driving, but pay attention and note down anything that doesn't feel or sound right. When you reach your destination, please get in touch with Roadside assistance and report any findings.
---	------------------------------	---	---



P4 vehicleMANUAL

Dash Warning lights – 2019 to 2023 model

Warning Light Symbol	Warning Light	Description	What to Do if the Light Comes On
	Brake Warning (Red)	Handbrake engaged or low brake fluid. If with ABS light, brake fault.	Pull over safely & avoid sudden braking. If the light comes on with ABS light, stop immediately & contact Roadside Assistance.
	ABS Warning (Amber)	ABS fault – brakes work without ABS. If with brake light, possible brake failure.	If on alone, drive cautiously & check as soon as possible. If with brake light, stop immediately & call Roadside Assistance.
	Electronic Stability Control (Amber)	Traction control fault; flashing = active, constant = fault.	Drive with caution. Restart engine; if still on, contact Roadside Assistance.
	Electronic Brakeforce (Amber/Red)	The braking system has malfunctioned	You can still drive very cautiously & contact Roadside Assistance.
	Airbag/SRS (Red)	Fault in airbag or seatbelt system.	Contact Roadside Assistance.
	Coolant Overheat (Red)	Engine overheating – possible low coolant or leak.	Stop immediately & contact Roadside Assistance.
	Power Steering (Amber/Red)	Overheated or failed steering assist.	If red, take extra care steering. Pull over & contact Roadside Assistance.



P4 vehicleMANUAL

	Battery Charge (Amber/Red)	Battery not charging.	Contact Roadside Assistance.
	Oil Pressure (Red)	Low oil pressure or high oil temp.	Stop immediately & contact Roadside Assistance.
	Engine Management (Amber)	Fault with engine or emissions.	Continue to destination & then contact Roadside Assistance.
 	Immobilizer (Amber)	Anti-theft fault or key battery issue.	Continue driving & contact Roadside Assistance.
	Tyre Pressure (Amber)	Low tyre pressure or puncture	Inflate to spec; if flat, stop & call Roadside Assistance.
	Glow Plugs (Amber)	Fault with glow plugs or relay	Safe to drive short term – contact Roadside Assistance.
	AdBlue (Red)	The AdBlue additive level is low	It is safe to drive for a short distance. top up with AdBlue fluid asap. The AdBlue cap is next to the fuel filler cap and is blue. DO NOT PUT ADBLUE INTO THE FUEL. Always fill the Adblue tank with at least 5 litres of AdBlue.
	Diesel Particulate Filter (Amber)	DPF regenerating or blocked.	Continue driving for 15 mins & if persists, call Roadside Assistance.
	Windshield washer fluid (Amber/ Yellow)	Windshield washer fluid level is low	Fill up with fresh water when convenient. The filler bottle is under the bonnet and has a blue cap
	Brake pad (Yellow)	A sensor has detected that your brake pad is at 20%	Continue driving & if you have more than 5000km's left on your trip, get in touch with Roadside Assistance.



P4 vehicleMANUAL

	Maintenance	The vehicle is due or close to scheduled service and maintenance.	This is just an indication that the service is approaching. This service can be carried out when you return the vehicle.
	Warning Triangle (Yellow)	• Fuel Inertia Cut-Off Switch Activated • Lights Failure: rear fog lamps, indicators, brake lights, number plate lights, side lights, daytime running lights, main beam • Airbag Warning Light Failure • Rain Sensor Failure • Diesel Filter Sensor Failure • Engine Oil Pressure Sensor Failure • Parking Sensor Failure • Water in Diesel Fuel Filter • Engine Oil Level Sensor Failure • Insufficient Engine Oil Level • Low Engine Oil Pressure • Warning Light Failure	Continue driving, but pay attention and note down anything that doesn't feel or sound right. When you reach your destination, please get in touch with Roadside assistance and report any findings.