

Polaris 2

Your complete guide to your Star RV vehicle

Australia / Gen001

starrv.com | October 2026

Images within this manual are for illustrative purposes only.
Actual vehicle, model, and exterior paint colours may vary.

TABLE OF CONTENTS

Welcome to Your Star RV Vehicle....4
Before You Hit the Road....4
Description of keys....6
Vehicle equipment....6
Baby seat installation....8
Dashboard & Controls....9
Starting the vehicle....9
Reverse Camera....10
Connect your phone....10
Windows & vents....12
Fan....12
Entrance step....13
Dashboard warning lights....14
Power & Electrical Systems....19
Power overview....19
240-volt electrical system....21
12-volt electrical system....22
Power points and USB accessories....24
Water & Bathroom Systems....25
Freshwater tank and water access....25
Greywater tank....25
Water pump....26
Hot water heater....27
Toilet use....28
Toilet cassette....28
Shower....30
Outdoor Shower....30
Kitchen & Appliances....31

Microwave 31
Gas bottle 32
Stove top 33
Tap & sink 34
Fridge 35
Comfort & Living 36
Heater & air conditioner 36
Lights 37
Television 38
Dining table 38
Swivel chairs 39
Sleeping & Living Areas 40
Bed 40
Storage 40
Internal blinds 40
Outdoor Living 42
Awning 42
Fuel, Maintenance & Roadside 43
Diesel fuel 43
AdBlue 43
Jack & spare tyre 44
Additional vehicle information 45
Vehicle Return 46
Get ready for vehicle drop off 46

GETTING STARTED

Welcome to Your Star RV Vehicle

Before You Hit the Road

Welcome to your Star RV adventure! This manual is your complete guide to everything you need to know about your vehicle. Please read all sections carefully before your trip begins to ensure a safe and enjoyable experience.

IMPORTANT INFORMATION
Before starting your journey, take a few moments to familiarise yourself with the motorhome and make sure everything is secure. These simple checks will help you enjoy a safe and comfortable journey.

Tip	What you need to know
Download the vehicle manual	Get to know your vehicle with our how-to videos and the full vehicle manual. Scan the QR code in your vehicle to find them, and make sure you're looking at the correct vehicle generation.
Secure your belongings	Make sure luggage and personal items are safely stored. Close and latch all cupboards, drawers, the fridge/freezer and bathroom or shower doors. Avoid leaving loose items on benches, tables or the dashboard as they may move when driving.
Check the outside of the vehicle	Ensure the awning is fully retracted and secured, the entry step is stored away, and all external power, water and other connections have been disconnected. Take a quick walk around the vehicle before departing.
Know your vehicle's dimensions	Be aware of the motorhome's height, width and length. Take extra care around low branches, bridges, tunnels, car parks, petrol stations and other areas with restricted clearance.
Allow extra space	Motorhomes are larger and heavier than standard cars. Allow additional space when turning, changing lanes, merging and stopping, and maintain a safe following distance.
Keep left	In Australia and New Zealand, we drive on the left-hand side of the road. Take extra care when turning, entering roundabouts and changing lanes.
Take care when reversing and parking	Use your mirrors and reversing camera where fitted, but don't rely on them alone. Check your surroundings carefully and, where possible, have someone outside the vehicle guide you.
Plan your route	Check that your planned route is suitable for a motorhome. Consider vehicle height and road conditions, and don't assume your GPS will account for the dimensions of your vehicle.

Take extra care in regional areas	Regional roads can be narrower, winding or unsealed, with fewer fuel stations and services. Plan fuel and rest stops ahead of time and allow extra time for your journey.
Watch for wildlife	Animals are more active around dawn, dusk and overnight, particularly in regional areas. Stay alert and reduce your speed where appropriate. If an animal enters the road, brake firmly and stay in your lane where it is safe to do so. Avoid sudden swerving.
Be particularly careful at dawn and dusk	Visibility can change quickly around sunrise and sunset, and wildlife may be more active. Reduce your speed, use your headlights as appropriate and remain alert for animals, cyclists and other road users.
Allow for changing road conditions	Drive to the conditions and take extra care on narrow bridges, winding roads, uneven surfaces and in wet or windy conditions.
Check your fuel and mobile coverage	Don't assume the next fuel station or town will be nearby. Plan ahead when travelling long distances and be aware that mobile coverage can be limited in regional and remote areas. Download maps or directions before entering areas with limited coverage.
Be aware of limited services in regional areas	If you travel a long distance from one of our branches, access to vehicle repairs, roadside assistance, parts, and other support may be limited, particularly in remote areas, on weekends and during holiday periods when some repairers may be closed. If you experience an issue, contact us as soon as possible so we can work with you to find the best available solution. ***Please be patient while we coordinate assistance, as arranging repairs or recovery in regional areas can take additional time and coordination.***
Take your time	If you're new to driving a motorhome, allow yourself time to become comfortable with its size and handling. Take it easy, leave plenty of space and enjoy the journey.

Description of keys

Key	What you need to know
  Ignition	**Ignition Key** Use for: • Start your vehicle. • Unlock/lock the diesel tank cap.
  Fresh water	**Fresh Water Key** Use for: • Unlock/lock the freshwater compartment.
  Compartment	**Compartment Key** Use for: • Unlock/lock the toilet cassette compartment. • Unlock/lock the LPG gas compartment.
  External shower	**External Shower Key** Use for: • Unlock/lock the external shower compartment.

Vehicle equipment

Fire extinguisher

Each vehicle is equipped with a dry chemical fire extinguisher, meticulously selected to address both type B fires (involving grease and liquids) and type C fires (involving electrical elements). To deploy the extinguisher effectively, grasp the ring situated atop the bottle, direct the nozzle towards the base of the flames, and press down the lever firmly. Guide the nozzle from side to side to cover the entire width of the base of the flames.

The fire extinguisher is attached to the interior of the vehicle.



IMPORTANT INFORMATION
Do not attempt to put out a fire if you are in any danger. If you are unable to control the fire, stay away from the vehicle in case of explosion and call emergency services.

Smoke alarm

Each vehicle is furnished with a smoke alarm, serving as a crucial element for your safety and security. This alarm is energised by a replaceable 9-volt battery. Should a replacement be warranted during the duration of your rental, kindly procure a new battery, retain the receipt, and upon vehicle return, reimbursement will be facilitated accordingly.



IMPORTANT INFORMATION
Do not disconnect the smoke alarm. It must be connected at all times for your safety.

Smoke alarm troubleshooting

Issue	Possible Cause	Solution
The smoke alarm is beeping intermittently (beeping is not frequent and spaced).	The 9-volt battery is running low.	Replace the battery with a new 9-volt battery. Keep the receipt, as you will be reimbursed for this upon return of the vehicle. 
The smoke alarm is beeping quickly and will not stop. There is no fire or smoke present.	Smoke, steam, or dust has triggered the alarm (commonly from cooking, or dust in the air)	Ventilate the area by opening windows and doors and turning on a fan. If cooking, move away from the alarm and allow the air to clear. Do not disconnect the alarm. If there is no visible smoke, steam, or fire source and the alarm continues, you can try to replace the batteries. ***If there is an actual fire and or heavy smoke, evacuate immediately and call emergency services.***
The smoke alarm is flashing.	This is normal; most smoke alarms flash a small LED light periodically to indicate the unit is powered and functioning correctly.	No action required. This is simply confirming the alarm is working as intended.

Baby seat installation

The two anchor points for baby seats are located on the front forward-facing seat at the dinette behind the driver's cabin. The anchor points are on the bottom of the chair at the back.



To install the baby seat:

1. Feed the tether strap through the back of the chair.
2. Reach your hand through the middle join of the chair and clip the tether strap to the anchor point.
3. Thread the vehicle seatbelt through the seat belt path on the baby seat from one end and buckle on the other side.
4. Ensure the seatbelt is firmly secured.

VEHICLE CONTROLS

Dashboard & Controls

Starting the vehicle

The gear stick must be in PARK and your foot on the pedal in order for the vehicle to start.




Gear stick in parking mode

The dashboard will display a 'P' indicating that the vehicle is in park. Start the vehicle using the ignition key.




Gear stick in driving mode

With your foot still on the brake pedal, pull the gear stick down into the 'D' position. The dashboard will display a 'D' indicating that the vehicle is in drive.
Disengage the hand brake by clicking it down once. A white light will disappear. To engage the handbrake, pull the handbrake button towards you. A white light will appear.



IMPORTANT INFORMATION
The handbrake is on the right-hand side of the steering wheel. Do not forget to disengage the handbrake before you drive.

Reverse Camera

Variant 1 - REVERSE CAMERA in the vehicle dash as a screen:
In the middle consol of the vehicle within the panel screen. This camera automatically turns on and displays your surroundings on the panel screen when putting the vehicle into reverse.
There may also be a power button which when pressed turns on or off the screen on the dash.

Variant 2 - REAR CAMERA in the revision mirror:
The revision mirror next to the sun visors displays a rear camera when driving, so that you can see the cars behind you. This camera will automatically display on the mirror when you are in drive.
You can move the lever in the middle of the revision mirror up or down to swap between displaying a vanity mirror and the rear camera.

Refer to the image below with the arrow to see the location of the lever.




Connect your phone

Apple CarPlay® & Android Auto™ setup instructions.
Step 1: Connect
Connect your phone to any available USB-C or USB-A port using a genuine or certified data cable.
Step 2: Unlock
Unlock your phone and accept any connection prompts.
Step 3: Select
Select the Apple CarPlay® or Android Auto™ icon on the vehicle screen.



Dashboard ports

Dashboard Port Location

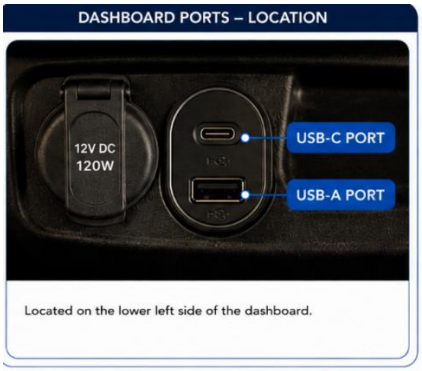

Located on the lower left side of the dashboard.

Apple CarPlay® Requirements

- Compatible iPhone
- iOS 7.1 or later
- Genuine Apple Lightning cable or Apple-certified cable
- Mobile data connection



Android Auto™ Requirements

- Compatible Android™ phone
- Android 6.0 or later
- Genuine or manufacturer-approved USB data cable
- Android Auto app installed (if required)
- Mobile data connection



Troubleshooting — If Your Device Does Not Connect

- Ensure you are using a genuine or certified data cable. Charging-only cables will not work.
- Confirm the cable is fully inserted into both your phone and the USB port.
- Unlock your phone and accept all prompts.
- Ensure mobile data is turned on.
- Ensure Siri® (Apple) or Google Assistant™ (Android) is enabled.
- Check that your phone software is up to date.
- Try a different genuine data cable if available.

Important

- For your safety, complete initial setup while the vehicle is parked.
- Mobile data charges may apply.
- Performance may vary depending on your phone, software version and cable quality.

Windows & vents

Windows

To open the windows on board your vehicle, turn the handles inwards. Push the window out and click the latch in place. The window has a mosquito net and a sun blackout blind. These can be used separately. To use the mosquito net, pull the white blind down using the handle indents. To use the sun blackout blind, pull the blind up using the handle indents.





Vents

To open the vents, grab the rail, twist and pull it towards yourself.
The vent has a mosquito net and a sun blackout blind. To use the mosquito net, pull the blind towards yourself using the handle indents. To use the sun blackout blind, pull the blind away from yourself using the handle indents.





IMPORTANT INFORMATION
Please remember to close your vents before driving.

Fan

The fan is located above the double bed. The fan works on 12-volt power.




1. Button – Power ON/OFF
2. Settings button – sets the level of fan speed.

Entrance step

The vehicle is equipped with a convenient entrance step located on the passenger side sliding door, enhancing ease of entry for passengers.

The button to extend and retract the step is located on the side of the kitchen cupboard. To extend the entrance step, push the down arrow on the button. To retract the entrance step, push the up arrow on the button.





IMPORTANT INFORMATION
When the vehicle is turned on and shifted into drive, the step will retract automatically.

Dashboard warning lights

Fiat Ducato – Dashboard Warning Lights Guide. Models this applies to: P2 Gen 1 – 2023 Model. It's important to know what each dashboard warning light means and what actions you can take, because you might be able to avoid a breakdown or catastrophic failure which will result in your vehicle being towed and disrupting your holiday.

This guide will give you the facts you need to understand what the different amber and red warning lights on your dashboard mean, should they come on, why they come on, the urgency of the problem and what you should do when you see them.

The warning lights on your dashboard follow a simple traffic light colour system:

- **Green:** The system is functioning properly or is actively in use.
- **Amber:** There is a malfunction or fault - exercise caution and have it checked at your next convenience, but it is not immediately critical and non-urgent.
- **Red:** A serious and potentially dangerous issue - stop driving as soon as it is safe to do so as this could cause severe damage, costly repairs or compromise safety.

	**Brake Warning** Also known as the brake system warning light, parking brake warning light or brake fluid warning light. The brake warning light illuminates in red indicating that the handbrake is engaged. If the handbrake is fully released but the brake light remains lit, it indicates low brake fluid levels or if you are driving downhill for a long period of time. If the ABS warning light is also illuminated, this signals that the braking system has malfunctioned and your brakes may not work properly. **Can I still drive with my Brake warning light on?** Pull over and stop as soon as it's safe to do so - keep your speed low and avoid braking suddenly. If the light goes out after you stopped the vehicle, the problem has cleared. As brake pads wear, fluid levels fall causing the light to come on. If the problem persists please get in touch with Roadside Assistance.
	ABS Warning Also known as ABS (Anti-lock Braking System), an add-on safety system to prevent the brakes locking and skidding. ABS helps to prevent the wheels from locking when under hard braking. If ABS fails, normal brakes are unaffected, though they operate without ABS. The most common cause for the ABS warning light is a damaged wheel speed sensor. Diagnostics and fault code scanning should determine the malfunction. **Can I still drive with my ABS light on?** If the ABS light comes on by itself you should still have normal, unassisted braking, so it's safe to continue your journey – but keep your distance, take extra care, and get it checked as soon as possible. If it comes on with the red brake warning light it could indicate that the brake system is failing and you should stop straight away and get in touch with Roadside Assistance.

	Electronic Stability Warning Also known as Electronic Stability Control (ESC). This warning light indicates a problem with traction control. If it's flashing it means the ESP system is intervening – for example, if you're driving on a slippery road. If the light stays constantly lit, it indicates a malfunction. The ESC / ASR system is reliant on wheel speed sensors and these sensors are prone to damage. The ESP light will light up with the word 'OFF' if the system has been deactivated, in which case you may have inadvertently turned it off. **Can I still drive with my Electronic stability light on?** Yes, be cautious and drive to the conditions. To check, try stopping, shutting down and restarting the engine. If the light remains on after restarting get in touch with Roadside Assistance.
	**EBD Failure Warning** The simultaneous illumination of the brake warning light, ABS light and the ESC warning light mean that the EBD system is either unavailable or has malfunctioned. EBD stands for Electronic Brakeforce Distribution and is responsible for distributing brake force to individual wheels, helping to improve the van's braking abilities. **Can I still drive with my EBD light on?** Yes, however with an EBD failure, unstable braking may occur such as locked rear wheels or the van may swerve when braking. Drive cautiously since the vehicle's brakes need to be serviced right away, please get in touch with Roadside Assistance.
	**Airbag Warning** Also known as the supplemental restraint system (SRS) warning light or seatbelt warning light. When this light goes red it means that at least one element of the seatbelt or airbag safety system is not working correctly: • Airbag module fault. • Airbag crash sensors damaged, often due to a collision or water damage. • Problems with seat belt / buckle. • Wiring under the seats dislodged. **Can I still drive with my Airbag light on?** Check all seatbelts are buckled and clipped in correctly. It can also come on if a heavy bag is placed on a seat, making the vehicle think that someone is sitting in the seat without a seatbelt on. If this light comes on and you cannot get it to turn off, please get in touch with Roadside Assistance.
	**Engine Coolant Overheating Warning** Also known as the coolant temperature warning light. This light will come on when the engine is overheating. This could mean that coolant levels are running low, perhaps due to a leak in the system, or it could be a sign of a larger problem, like a head gasket failure. **Can I still drive with my engine overheating light on?** If this light is red you should stop straight away, as without enough coolant your engine will have irreparable damage. Check that coolant levels are not below the MIN. mark on the reservoir tank. If topping up, allow time for the coolant to cool before removing the cap. Have a look to see if there are any obvious leaks. If you can't see any and the light goes off after topping up then you should be fine to continue your journey. If the light comes back on again after topping up please stop the vehicle and get in touch with Roadside Assistance.

	**Battery Warning** Also known as the battery charge light or battery charging system light. If this light comes on when you're driving it indicates that the battery is not charging. This could be due to a problem with your car's electrical system and it could have several causes, such as a faulty alternator, faulty battery, bad electrical connection or damaged cabling. **Can I still drive with my battery charging system light on?** Yes, however your car will run as normal until the battery is dead but once it is drained your vehicle will not start. If this light comes on, get in touch with Roadside Assistance.
	**Oil Pressure Warning** Also known as the low engine oil or low oil pressure light. The oil warning light comes on when either the oil temperature gets too high or the oil level or pressure is too low. If the oil is not lubricating the engine effectively it could lead to expensive or irreparable engine damage, so it's important to act quickly. **Can I still drive with my low engine oil light on?** When the red light comes on you should stop as soon as possible and turn off the engine. Have a look for any obvious oil leaks under the car, and then check the oil levels, topping up if necessary. If the oil levels are fine, then the oil pump may be faulty. In this case get in touch with Roadside Assistance. Have a look to see if there are any obvious leaks. If you can't see any and the light goes off after topping up then you should be fine to continue your journey. If the amber coloured light comes on, you can continue to drive. This warning light will usually come on because of cold weather and the oil needing time to warm. You can drive for 30 minutes to give time for the oil to warm up. If the colour of the light turns to red follow the instructions above.
	**Power Steering Warning** Also known as the EPS or EPAS warning light. The steering wheel and exclamation mark indicate a problem with the power steering. Excessive usage of the steering when the vehicle is stationary, or leaving the steering on full lock while the engine is running can cause the power steering motor to overheat. **Can I drive with my EPS light on?** This is temporary and normal steering operation will resume once cooled. You can continue to drive but if the warning light is red, the power steering system has a failure, you will notice that the car is harder to turn and you should take extra care. If the light remains on, pull over when safe to do so and get in touch with Roadside Assistance.
	Engine Management Warning Also known as the check engine or ECU warning light. When the engine management light is illuminated it can indicate a number of faults, from minor issues like a broken electrical sensor to a much larger mechanical issue, like a fault with your emission control system or catalytic converter. **How long can I drive with my check engine light on?** If the check engine light comes on you can continue to your destination, then get in touch with Roadside Assistance.
	**Glow Plugs Warning** The glow plugs light may remain lit for longer periods of time in cold conditions, but only a very short time in warm conditions. If the glow plug light remains constantly lit or flashes, it's likely that the glow plugs and/or relay switch require replacement. **How long can I drive with my glow plug warning light on?** It is safe to drive but the vehicle needs to be diagnosed, please get in touch with Roadside Assistance.

	**AdBlue Warning** The diesel emissions additive (AdBlue) warning light comes on when levels are low. AdBlue consumption depends on driving style. When the AdBlue light comes on, top up with AdBlue fluid asap. The AdBlue cap is below to the fuel filler cap and is blue. DO NOT PUT ADBLUE INTO THE FUEL TANK. Always fill the AdBlue tank with at least 5 litres of AdBlue. **How long can I drive with the AdBlue warning light on?** It's safe to drive but if not topped up soon, the vehicle will go into "limp mode" and may not start, leaving you stranded. You will have approximately 600 km of travel to refill the AdBlue once this light comes on.
	**Immobilizer Warning** Also known as the anti-theft warning light. This light should flash once when the ignition is set to MAR. If the warning light illuminates constantly, it indicates a possible failure in the engine immobilizer / anti-theft system. If the light consistently flashes with the engine running, it means the van has a code system failure. It may be as simple as requiring a new battery in the key FOB. **How long can I drive with my immobilizer warning light on?** You can continue driving, however please get in touch with Roadside Assistance.
	**Warning Triangle** It's a generic warning where no dedicated alternative warning light is used. The general failure triangle warning light may come on due to the following: • The fuel inertia cut-off switch is activated. • Lights failure, including rear fog lamps, indicators, brake lights, number plate lights, side lights, daytime running lights, main beam. • Airbag warning light failure. • Rain sensor failure. • Diesel filter sensor failure. • Engine oil pressure sensor failure. • Parking sensor failure. Certain versions of the Ducato may display the parking sensor warning light. • Water in diesel fuel filter. Certain versions of the Ducato may display the water in fuel filter warning light. • Engine oil level sensor failure. • Insufficient engine oil level. • Low engine oil pressure warning light failure. **Can I still drive with my triangle warning light on?** Yes but pay attention and note down anything that doesn't feel or sound right. When you reach your destination, please get in touch with Roadside Assistance and report any findings.
	**Diesel Particulate Filter Warning** Also known as the DPF or exhaust particulate filter warning light. This light may appear occasionally to alert the driver that the DPF system is running a cleaning cycle. The light will go out once it has finished. If blocked and requires elimination of trapped pollution particulates, the light comes on and stays on, meaning the system requires driver input. On certain versions of the Fiat Ducato, an alternative DPF warning light may be used. Short trips with lots of stops and starts can cause this light to come on. **Can I still drive with my DPF light on?** Yes, drive at a speed of 60 km/h with the engine revs above 2000 rpm for about 15 minutes. Ideally, driving for long durations on a highway is the best way for the vehicle to run the regeneration. When regeneration is complete, the warning light goes off. If the DPF warning light stays on, try the process again. Failing that, please get in touch with Roadside Assistance.

	Brake Pad Warning Also known as the brake pad wear warning light. If this symbol shows up it means a sensor has detected your brake pad wear is at 20%. **Can I drive with my brake pad light on?** Yes, this warning light is designed to come on before the brake pads become dangerously thin, usually with 20% of the pad remaining. If you still have more than 5000 km left on your trip, get in touch with Roadside Assistance.
	Tyre Pressure Warning Tyre pressure monitoring systems let you know when the pressure falls. This could happen over time or it could be because of a puncture. **Can I still drive with my tyre pressure light on?** Yes, but you should drive with extra care and aim to check the tyres at the next opportunity. Low tyre pressure can cause unsafe driving conditions so reduce your speed, and try to avoid braking suddenly or making any violent steering actions. Inflate the tyres according to the vehicle manufacturer specification in the tyre chart sticker inside either the driver's or passenger's front doors. If you have a flat tyre, please get in touch with Roadside Assistance.
	**Maintenance Warning** This spanner warning light comes on when the van is due or close to scheduled service and maintenance. **Can I still drive with the service due light on?** Yes, this is just an indication that the service is approaching. This service will be carried out when you return the vehicle.
	**Lane Control System Failure** This Fiat may be equipped with lane assist technology. This system will automatically move the steering wheel if it senses the vehicle is moving off the road. **Can I still drive with my lane control system light on?** Yes. This system can be manually turned off, so check this. There will be a button on the dash to turn it on and off. If this does not work, there may be a fault in the system. You can continue on your journey and please get in touch with Roadside Assistance when convenient.
	**Collision Avoidance System Warning** This Fiat may be equipped with collision avoidance technology. This system will automatically apply the brakes if it senses a collision is about to occur. **Can I still drive with the collision avoidance system light on?** An amber light may appear if the system activates or intervenes. If the light appears with an exclamation next to it and it is red, it indicates a fault in the system. This most commonly occurs if the radar system in the windscreen or on the front of the vehicle has been obscured or has been damaged. If no damage has occurred, check the front of the vehicle for any obstructions such as mud, snow or excessive build up of bugs. Clean where possible and restart the engine. You can continue driving to your destination, however the automatic collision avoidance system will not function, and this needs to be reported to Roadside Assistance.

POWER & ELECTRICAL

Power & Electrical Systems

Power overview

Understanding Your Vehicle's Power. A few minutes now means a seamless journey ahead. Your motorhome is designed to keep everything running smoothly so you can focus on the moments that matter. This guide answers the questions most travellers ask, so you're confident and prepared from the very first night.

What power systems does my vehicle use?

Your motorhome draws on three independent power sources, each serving a different purpose on the road.
Your engine starter battery is entirely separate from the domestic house battery. Running appliances, lights, or the fridge will not affect your ability to start the vehicle.

- **Domestic Battery (12V)** — Powers the living area: lights, fans, water pump, and fridge. Under normal use, a full charge lasts approximately 12–14 hours.
- **Mains Power (240V)** — At a powered campsite, 240V mains power runs your fridge, microwave, air conditioner, hot water and power points — and automatically recharges the domestic battery through the vehicle's built-in charger.
- **LPG Gas** — Powers the gas stove top and the hot water system, ideal for nights away from powered sites.

> **!** **IMPORTANT INFORMATION**
> Connect to 240V mains power at least every second night to keep the domestic battery charged and in good condition.
> Do NOT plug into a standard home power outlet. Your motorhome requires a 15A campsite supply. A standard 10A domestic socket can overload the circuit, create a fire hazard, and damage your vehicle.

How do I keep the domestic battery charged?

- **Plug into mains power (240V)** — The best option. A powered campsite connection will fully recharge the battery overnight while running your appliances. It requires 10-16 hours of continuous charging via 240V mains power to reach full capacity.
- **Drive the vehicle** — The engine's alternator charges the battery while you're on the road. Keep in mind that several hours of driving are needed for a full recharge, and idling the engine at your campsite is not an effective substitute.

> **!** **IMPORTANT INFORMATION**
> A battery that isn't recharged regularly will degrade over time. If it runs flat, appliances will stop working and the battery may need replacement. Staying at a powered site every second night is the simplest way to avoid this.

How long will the battery last when we're off-grid?

It depends on how much you're running. As a guide:

- Light use (lights, water pump, charging devices) approximately 12–14 hours.
- Heavy use — noticeably less.

Running the fridge on 12V battery power alone while parked will drain the battery within 3–4 hours, leaving other appliances without power. Connect to mains power at your next stop to recharge.

Will the fridge keep running when we're not plugged in?

Yes, for a period of time. When unplugged, the fridge switches to the 12V domestic battery and holds the temperature it was last at. It won't cool things further, only maintain them for approximately 3–4 hours before the temperature begins to slowly rise.

Can we use the microwave when off-grid?

No. The microwave requires 240V mains power and won't function on the domestic battery. Plan to use it when you're connected at a powered campsite.

How do we check the battery level?

Your motorhome has a battery monitor near the control panel that displays the current charge level. Check it regularly when free camping if the reading drops below 12V, appliances will begin to underperform.
Our team will walk you through the battery monitor during your vehicle handover. Don't hesitate to ask we're here to make sure you leave feeling confident.

Five Simple Habits for a Well-Powered Trip

- **Keep an eye on your battery level** — A quick glance at the battery monitor each morning takes seconds and gives you the confidence to plan your day especially on free camping nights.
- **Save high-draw appliances for powered sites** — Air conditioners, microwaves require 240V mains power. Save them for powered campsites, and you'll have reliable battery reserves for everything else.
- **Switch off what you're not using** — Lights, the water pump, the fridge on a high setting when it's nearly empty — these small draws add up. A quick check before bed can extend your battery life by hours.
- **Let your driving time work for you** — The alternator charges the house battery while you're moving. Use this time to charge devices or run higher-draw appliances, then ease into lighter usage once you've parked.
- **Plan your stops with overnight charging in mind** — Aim for a powered campsite at least every second night. It keeps the battery healthy, lets you enjoy the full range of appliances, and means you're always ready for the next leg of your journey.

240-volt electrical system

To run the microwave, power points, air conditioner and to recharge the house battery, connect the vehicle's 15AMP electrical cord to a 240-volt external power source. The power points and some electrical items will only work when plugged into power.





IMPORTANT INFORMATION
It is recommended that the vehicle is plugged into power every 2nd night to keep the house battery charged.

ADDITIONAL TIPS
Ensure you unplug the power cord and put it away in its correct stowage before driving to prevent damage to the vehicle and to the campground power.

IMPORTANT INFORMATION
The motorhome connects to powered outlets at caravan parks.
Our vehicles must only be connected to an approved 240V, 15-amp RV/campervan power outlet using the power lead supplied with the vehicle.
You cannot use a standard household power cable as a substitute.

The 240-volt outlets and appliances are protected by two circuit breakers. This device is intended to protect you from electrical shock hazard when you are using the electrical appliances. If you experience a power surge where the circuit breakers trip, locate the circuit breakers on the outside of the vehicle and switch them back to the ON/UP position. The circuit breakers are located next to the power outlet.



Overloading the 240-volt system will cause the circuit breakers to turn off. This can happen when using multiple 240-volt items at once.

ADDITIONAL TIPS
When connecting the vehicle to mains power, ensure the 240V plug is fully inserted into the vehicle's power inlet before switching on the campsite power. A secure connection helps ensure a reliable power supply and reduces the risk of damage to the plug or socket.

IMPORTANT INFORMATION
Ensure all appliances in the vehicle are turned off before disconnecting from the campsite power to prevent short circuiting the vehicle power.

The 240V power lead is stuck and won't unplug

If you're having difficulty removing the 240V power lead:

1. Turn OFF the power at the campsite power outlet before disconnecting the lead.
2. Firmly grip the plug (not the cable) and pull it straight out from the vehicle socket.
3. If the plug does not release easily, do not use excessive force or tools to remove it, as this may damage the plug or the vehicle's power inlet.
4. Contact our On Road Support team for assistance because it will need to be fixed by a repair person.

Troubleshooting the 240-volt

Problem	Possible cause / Solution
240-volt not working	Check the 240-volt cord is connected to the power site and motorhome properly. Make sure the circuit breakers on both the power site and motorhome haven't tripped. If the above options are correct, try to change the 240-volt cord (can usually hire from a campsite) or try an alternative power site. If the plug does not release easily, do not use excessive force or tools to remove it, as this may damage the plug or the vehicle's power inlet. If none of the above work, please call the Star RV helpline.
Power Outage in the vehicle and no appliances are working	Overload of the circuit breaker due to many appliances running at the same time. OR Faulty or damaged power cable. If you experience a power surge where the circuit breaker trips, locate the circuit breakers on the outside of the vehicle, next to the power outlet, and switch back to ON/UP position. If Power cable is the confirmed issue, you can contact us for approval to reimburse you for a replacement.

12-volt electrical system

Your vehicle has two batteries. One in the engine compartment and one in the rear of the cabin. The battery inside the cabin is also called your domestic battery. The engine compartment battery is located under the passenger side cabin floor, in the main driver's cabin.
The domestic battery operates the water pump, fridge, cooktop & interior lights. The domestic battery is charged by the alternator when the vehicle is being driven and the 240-volt system when it is plugged into a mains power source.
The 12-volt electrical panel is located above the sliding door on the wall. To turn it on, press the load button twice. You will see a small LOAD "on" appear on the screen.



1. Indicates the level of fresh water
2. Indicates the level of wastewater
3. Illuminates when connected to 240v
4. Illuminates green when the water pump is on
5. Displays outside temperature
6. Output power
7. Voltage of house battery
8. House battery state of charge



1. Ceiling Light
2. Bedroom Light
3. Shower Light & Fan
4. Outside Light
5. Night Mode (dims panel)
6. On Button
7. Not in Use
8. USB Power points
9. TV
10. Water Pump

IMPORTANT INFORMATION
The more appliance you use, the faster the power will drain from the battery. If the 12V battery drops to 11V or below, drive the vehicle or plug into 240V power to recharge it.

ADDITIONAL TIPS
The vehicle is fitted with a kill switch located next to the 240volt power outlet. If your 12-volt does not work, please flick the kill switch up.

IMPORTANT INFORMATION
If you are going off grid for a few days, ensure you have a full battery (12-volt) as your battery will only last up to two days when used conservatively. We recommend you recharge your devices using the USB charging ports when driving, so not to drain the vehicle battery.

Power points and USB accessories

The vehicle is equipped with two power points located in the kitchen and 1 power point located under the dining table. These will only work when the vehicle is plugged into 240-volt mains power.

The vehicle is equipped with 2 USB charger ports as well as an auxiliary power outlet located under the dining table. These will work when the vehicle is plugged in and only when the 12-volt control panel is turned on (Switch A).





WATER & BATHROOM

Water & Bathroom Systems

Freshwater tank and water access

On board the vehicle is a freshwater system consisting of a water pump and freshwater tank. The freshwater tank has an 80L capacity and is located on the passenger side of the vehicle. This water is for the sink, shower and toilet flush.

To fill the freshwater tank:

1. Unlock the compartment that says "Fresh water only" with the small black key on your keyring.
2. Remove the cap from the water inlet.
3. Place the end of the water hose into the tank and connect the hose to the tap to fill the vehicle with fresh water.



ADDITIONAL TIPS

Do not use too much pressure as the tank must be vented when filling. In the event of an air bubble, simply remove the hose, reinsert it and fill slowly again. The tank is full when the water starts to overflow from the water inlet.

You can check the level of your water on the 12-volt switchboard as seen below. This is the 2nd tank level on the control panel.



Greywater tank

The grey water holding tank collects wastewater from the kitchen sink, bathroom sink and shower. You can check the level of your water on the 12-volt switchboard as seen below. This is the 1st tank level on the control panel.



IMPORTANT INFORMATION
It is not uncommon for the grey water level indicator to give an inaccurate reading. It may show 100% even if it is empty. We recommend emptying your grey water tank as regularly as possible.

To empty the greywater tank

1. Collect the grey water hose from the storage compartment.
2. Connect the hose to the outlet. Make sure it is firmly attached by pulling down the silver levers on each side of the attachment.




3. Place the other end of the hose into the dump station disposal opening.
4. Open the tank by turning the blue lever so it is parallel with the pipe and wait for it to empty.
5. Once the grey water is empty, close the lever, remove the hose and stow it away in the storage compartment.

ADDITIONAL TIPS
Should the grey water tank become obstructed during your journey, we recommend inserting a hose into the grey water outlet as far as it reaches. Turn on the hose to its highest pressure setting and direct the flow of water into the tank until it reaches full capacity. Once achieved, withdraw the hose, facilitating the flow of grey water. If needed, repeat this process until the obstruction is cleared.

Water pump

To use water on board the vehicle, ensure there is water in your freshwater tank outside. On the switchboard, press the PUMP symbol once. You will hear the pump quietly start up. The pump operates as part of the 12-volt system. When you are not using the water pump, ensure it is turned off. You must have this button on to operate the kitchen tap, shower and the toilet flush.



IMPORTANT INFORMATION
Avoid running the pump when the water tank is empty. Operating the pump continuously with no water can cause damage.

Hot water heater

The switch to activate the gas-operated water heater system is situated above the kitchen sink. To operate the water heater in your vehicle, please follow the steps below:

1. Turn the gas bottle, located in the rear doors under the bed, to the 'on' position, ensuring the valve is fully opened. Twist the valve on the gas bottle counterclockwise to open and clockwise to close.

ADDITIONAL TIPS
The system will not function if there's insufficient gas in the bottle. Make sure you have enough fresh water in the tank also.

2. Activate the water pump switch on the 12-volt switchboard.



3. Adjust the 'Boiler' switch upwards to the 60-degree mark.



4. Observe a brief flash of a red light on the 'Boiler' switch, which should then extinguish, indicating the system's operation. Should the red light persist, signalling that the burner has not ignited, cease all operations, reset the switch to the neutral 'O' position, and retry. You may attempt this up to three times. If ignition is not achieved by the third attempt, allow the system to rest for 10-15 minutes before retrying.

IMPORTANT INFORMATION
If the red light is not continuously illuminated, the system will proceed to heat water for your shower and sink. It typically takes around 20-25 minutes for the water to reach the desired temperature.

ADDITIONAL TIPS
Your motorhome is additionally outfitted with a 240-volt hot water system. When connected to mains power, this system will automatically activate and commence heating the water. If the water has already been heated via the 240-volt mains power, the gas operation for the hot water will be inactive.

Toilet use

1. Turn on the water pump on the 12-volt control panel.



2. Push the blue button on the toilet to fill the base with water (Diagram A).



Diagram A

3. Once finished, adjust the lever on the bottom of the toilet to empty into the cassette (Diagram B).



Diagram B

4. Ensure the lever is in the closed position after use (Diagram C).



Diagram C

Toilet cassette

It is highly recommended to regularly empty the toilet cassette, and it is mandatory to empty and clean it before returning the vehicle to the depot. To empty the cassette, lift the blue (or orange) lever and remove the entire cassette from the vehicle.



Should the cassette become jammed, refrain from applying excessive force. Instead, ensure that the toilet cavity inside the vehicle is securely closed. Once the cassette is removed from the vehicle, rotate the pour-out spout, and unscrew the cap. Dispose of the waste at a designated black water dump point.
Proper care of the toilet cassette will help prevent odours, maintain cleanliness, and ensure the toilet system operates correctly throughout your hire.

IMPORTANT INFORMATION
It is crucial for the cassette to click back into position to align with the toilet above.

To prepare and use the toilet cassette

- Ensure the cassette is securely fitted into the vehicle before use.
- Before first use, add one sachet of toilet chemical to the toilet. Push the lever to open the compartment and drop the sachet inside.
- Add approximately 0.5 litre of clean water also to activate the toilet chemical and assist with waste breakdown.

During your trip

- Empty the toilet cassette regularly at designated dump points. Do not allow the cassette to become overfull, as this may cause spills, leaks, or difficulty emptying.
- After emptying, add fresh toilet chemical and approximately 0.5 litre of clean water before continuing use.
- Using toilet chemical as recommended will help control odours and keep the cassette clean.

Preparing the toilet cassette for vehicle return

- Before returning your vehicle, the toilet cassette must be cleaned and returned completely empty and free of liquid.
- Empty the toilet cassette at a designated dump point.
- Rinse the cassette thoroughly with clean water. (You may need to repeat this process until the water runs clear.)
- Add the recommended amount of toilet chemical and approximately 0.5 litre of clean water.
- Gently swirl the solution around the inside of the cassette for approximately 30 seconds to clean the interior.
- Empty the cassette completely, ensuring all liquid has been drained.
- Reinstall the clean, empty cassette in the vehicle.

IMPORTANT INFORMATION
The toilet cassette must be returned completely empty and clean at the end of your hire. Do not leave any water, waste, or cleaning solution inside the cassette.

Shower

To operate the shower, please follow the steps below:

1. Activate the gas-operated water heater system (as shown above).
2. Turn on the water pump by pressing the PUMP button on the control panel.



3. Pull the shower handle towards you to turn the water on.
4. Adjust for hot or cold water by turning the handle. Left to 'H' for hot or right to 'C' for cold.



The vent in the shower serves as a means to expel excess moisture and odours from the vehicle. To open the vent, simply twist the handle anti-clockwise. Additionally, the vent is equipped with a fan that can be activated by pressing the small black button. This fan helps to further circulate air and ventilation in the shower/bathroom area, ensuring a comfortable and fresh environment inside the vehicle.

Outdoor Shower

To operate the outdoor shower, please follow the steps below:

1. Unlock the outdoor storage compartment found at the rear of the vehicle with your key.
2. To use the hot water, follow the shower instructions to turn on the hot water before use.



3. Pull the shower hose out from its storage and adjust the temperature using the knobs. Blue is for cold, red is for hot.
4. Push down on the lever located on the nozzle to allow the water to come through.
5. When finished, secure the hose back in its position, ensuring the tap is off, and the door to the compartment is closed.



KITCHEN & APPLIANCES

Kitchen & Appliances

Microwave

The microwave in your vehicle will only operate via 240-volt power. This means that you need to be plugged into an external power source.
When you are using the microwave, please be aware that there are certain materials that must not be put in the microwave.



NOT Recommended

- Paper bags are a fire hazard - except the obvious like popcorn bags which are designed to be microwaved.
- Aluminium foil.
- Never use dishes with metal rims.
- Plastic containers - can melt.
- Wire ties from bread and metal utensils.
- Styrofoam plates and cups - can melt.
- Glass jars - can shatter.

Recommended

- Microwave approved glass, ceramic plates and bowls.
- Microwave browning dishes.
- Microwave plastic wrap, wax paper, paper towel and napkins.
- Paper plates and cups.

Troubleshooting the microwave

Problem	Possible cause
Microwave is inoperative and there is no display.	240-volt power is not plugged in to an outlet. Check that the vehicle is connected to mains power and that the powered outlet is in working order.
Microwave is operable (light on, turntable working) but is not heating food.	Microwave may be broken. Please call Star RV Roadside Assistance.
Sparks when microwave is turned on.	Metal object in microwave.

Gas bottle

The gas bottle is located at the back of the vehicle, under the bed. There is a cupboard marked by a L.P. Gas storage label.





IMPORTANT INFORMATION
Never drive with the gas bottle turned to the 'open' position.

To open the gas bottle, rotate the valve fully in an anticlockwise direction. To close the gas bottle, turn the valve on top of the gas bottle clockwise until it's securely tightened.

Gas bottle refills

The gas bottles can be refilled at any location that offers a refill of LPG gas. Depending on your location, it may be best to do a quick internet search for "LPG gas refill near me" to find the best option for you to use. Calling them ahead will help save you time and or disappointment.

In Australia, BCF (Boating, Camping, Fishing) or Bunnings located throughout Australia can assist with LPG gas bottle refills. Just make sure you call them ahead to double check at your nearest store.

Some vendors (Such as at a petrol station) may offer a swap and go service, however the size of the bottle may not match the bottle you already have. Just make sure you check the size of the gas bottle before using the swap option.

If you detect the smell of gas

1. Extinguish all open flames and smoking materials.
2. Refrain from touching any electrical switches.
3. Shut off the gas supply at the gas bottle using the valve on top of the bottle.
4. Open doors, windows, hatches, and any other ventilation openings.
5. Evacuate the area until the gas odour dissipates.
6. Contact Star RV for assistance.

Stove top

IMPORTANT INFORMATION
It is not safe to use cooking appliances for comfort heating. Always have sufficient ventilation when using this appliance by opening a window or door of your vehicle.

IMPORTANT INFORMATION
Once you've finished cooking, wait until the burners have cooled down before lowering the lid on the stovetop (if you have a lid).
The stove top lid must be in a fully upright position for the hotplate and grill to ignite.

The gas burners in the vehicle operate via gas. The basic functionality resembles that of a gas stove commonly found in households. However, it's crucial to note that the vehicle's confined space limits the amount of oxygen available. Therefore, it's imperative to ensure there is adequate ventilation whenever using the stove.
When the stove is in use, ensure that the rangehood is turned on. There are 4 buttons on the rangehood. From right to left:

1. Power button
2. Fan low button
3. Fan high button
4. Light on/off button



IMPORTANT INFORMATION
The stove will not work unless the rangehood is turned on.

How to operate the stove

To ignite the stove in the vehicle, follow these steps:

1. Locate the gas bottle on the exterior of the van and fully turn the valve on top of the gas bottle to the 'open' position.
2. On the stovetop, Press in, hold down, and turn the burner knob to your desired heat level.
3. While continuing to push in the burner knob, press the igniter switch until the gas ignites. Maintain pressure on the burner knob.
4. Wait approximately 15 seconds before slowly releasing the burner knob.



ADDITIONAL TIPS
If the flame extinguishes, the burner knob may have been released too soon. Repeat steps two to four and try again.

Tap & sink

The vehicle comes equipped with a water filtration system. The handle on the back of the tap dispenses filtered water, while the handle on the front provides water directly from the freshwater tank. The water pump switch must be on for the tap to work.





IMPORTANT INFORMATION
We ask that you do not put food scraps or any items other than liquids into the sink to prevent it from getting clogged in the first instance. We do not recommend you drink the water from the tap.

Troubleshooting Tips for the kitchen sink

Issue	Possible cause	Solution
My sink wont drain.	The most common reason for a sink not draining is due to the grey water tank not being emptied	Try emptying the grey water tank and see if this works.
	If the grey water tank is empty and your sink still won't drain, the pipe may be blocked.	We recommend pouring hot water or baking soda mixed with vinegar down the sink to unblock the pipe.

Fridge

The fridge in your vehicle operates via the 12-volt & 240-volt system. To operate the fridge, follow the steps below:

1. Press the “load” button on the control panel. The light will illuminate.
2. Check that the light is on in the fridge – this will indicate the fridge is on and working.
3. The thermostat can be found behind the drawer at the bottom of the fridge. The optimal range for the fridge is halfway between the minimum and maximum temperature settings.





IMPORTANT INFORMATION

The 12V battery system is designed to maintain fridge temperature, not lower it. To bring your fridge down to your desired temperature, you must connect to 240V power. Once the fridge has reached the right temperature, 12V will keep it there. We recommend plugging in to 240V power at least every second night.

COMFORT & LIVING

Comfort & Living

Heater & air conditioner

The vehicle is equipped with a reverse cycle air conditioner. This will generate both hot and cold air to suit your needs. The air conditioner only works when plugged into 240-volt power.





Operating the air conditioner

1. Plug the vehicle into 240-volt mains power.
2. Turn on the unit by pressing the red power button on the remote control.
3. Select the mode.
4. Adjust the temperature using either the up arrow button (for higher) or down arrow button (for lower).

IMPORTANT INFORMATION
Always ensure to turn off the air conditioner unit using the remote before disconnecting the vehicle from the 240-volt mains power.

Using the air conditioner in humid and hot conditions

When utilising the air conditioner in humid climates, it's essential to take extra precautions to ensure optimal performance and minimise potential issues.

- If leaving the vehicle unattended for an extended period, keep curtains/blinds closed to maintain a cooler internal temperature.
- Before activating the air conditioner, ventilate the interior by opening doors and windows to expel warm air from the motorhome, thus reducing the internal temperature.
- Once the internal temperature has sufficiently decreased, close all windows and external doors before switching on the air conditioner.
- Adjust the temperature to 23 degrees Celsius while ensuring the fan operates at maximum speed. Avoid setting the temperature below this level.
- By adhering to these guidelines, you can reduce the risk of condensation, which may lead to water overflow within the motorhome.

IMPORTANT INFORMATION
During periods of high temperature, air conditioners may experience fluctuations in power due to voltage drops from the 240-volt power source. This can result in blown internal fuses, causing the air conditioner to malfunction.

Using the air conditioner in cold conditions

- The air conditioning units may cease functioning when temperatures drop below 4 degrees Celsius.
- If this occurs, wait for the temperature to rise before attempting to use the air conditioner again.

Lights

To operate the cabin lights, turn on the 12-volt control panel by pressing the load button twice. You will see a small LOAD "on" appear on the screen.



There are 3 sets of light switches, one in the kitchen (Diagram 1), one in the bed area (Diagram 2) and one in the dining area (Diagram 3).
These operate the 2 lights above the bed, 1 light in the bathroom, 1 light in the dining area and 3 lights in the kitchen.
Clicking the OFF button on the interior light switch will turn all lights off in the vehicle.







Diagram 1 ***Diagram 2*** ***Diagram 3***

There are 3 lamp lights that are equipped with a USB port located in the vehicle: 1 in the dining area and 2 in the bed area. To turn these on, press the circle button lightly.



Television

To use the television on 240-volt power

Your TV only operates when the vehicle is connected to 240V mains power at a powered campsite. Please ensure that the television 240-volt cord is plugged in and the power switch is on. Use the 240V power cord to connect power to the vehicle.
Press **"Load"** and **"TV"** on the power control panel to give the television power.
To use free to air television, ensure the aerial (white or black cord) is plugged in. Please note that television reception may be limited in some rural areas.

To use the television on 12-volt power

Please ensure that the television "TV" button is switched on within the control panel and the power cable is connected.
To use free to air television, ensure the aerial (white or black cord) is plugged in. Please note that television reception may be limited in some rural areas.

ADDITIONAL TIPS
Kindly note that television reception may vary in rural areas.

Troubleshooting tips

Your TV works best when your vehicle is connected to 240V mains power at a powered campsite. Check the following:

- Ensure the vehicle is plugged into a powered site.
- Confirm the campsite power outlet is switched on.
- Check the TV power point and that no circuit breakers have tripped and it's plugged in with the power on.
- If the TV displays "No Signal", this is usually due to local reception. Adjust the aerial or retune the TV to local channels using the remote.
- No TV reception? You can still watch your own content by connecting a phone, tablet, or laptop to the TV via HDMI and selecting the HDMI input.

Dining table

To remove or adjust the dining table, click the buttons on the edge of the table so they are sticking up (Diagram 1). To ensure the table is in place, push the buttons down (Diagram 2).



Diagram 1



Diagram 2

Swivel chairs

The passenger and driver seats are designed to swivel around for your convenience, allowing you to easily transition to the dining table area. To swivel the chair around, pull the lever on the side of the chair (as seen below) towards you and spin the chair around.



SLEEPING & LIVING AREAS

Sleeping & Living Areas

Bed

The vehicle is equipped with one double bed.



Storage

The vehicle has a dedicated storage area under the bunk beds, as well as various drawers/cupboards throughout the vehicle to store personal items.



Internal blinds

To secure the internal thermal blind to the front windscreen and two side windows of the vehicle, follow these steps using the suction cups:

1. Retrieve the internal thermal blind from the storage compartment located above the front cabin of the vehicle.
2. Unfold the thermal blind and position it against the front windscreen, ensuring that it covers the entire surface area.
3. Attach the suction cups to the designated points on the thermal blind. These points are usually located along the edges of the blind.
4. Press firmly on each suction cup to ensure a secure attachment to the windscreen. Make sure there are no air gaps between the suction cup and the glass surface.
5. Repeat the same process for attaching the thermal blind to the two side windows of the vehicle using the remaining suction cups.

6. Once all suction cups are securely attached, adjust the position of the thermal blind as needed to ensure proper coverage and fit.
7. When not in use, carefully remove the suction cups from the glass surfaces and fold the thermal blind for storage in the designated compartment.





OUTDOOR LIVING

Outdoor Living

Awning

IMPORTANT INFORMATION
Take care with the awning – Always retract the awning in windy or rainy conditions. Wind can cause the awning to move or lift unexpectedly, while rain can cause water to pool and place excess weight on the awning, potentially causing damage. **Never extend the awning in windy conditions and retract it before conditions deteriorate.**

To roll out the awning

1. Using the awning handle, roll out the awning.



2. Unfold both awning arms by twisting them down.



3. Twist the button anticlockwise and pull down to secure the awning legs.



4. Secure the awning by using the provided tent pegs to anchor the awning legs into the ground or securing to the foot clips located on the side of the motorhome to hold the awning in place.



FUEL, MAINTENANCE & ROADSIDE

Fuel, Maintenance & Roadside

Diesel fuel

The vehicle accepts diesel fuel only. DO NOT refill the motorhome with any other fuel or fluid. The diesel tank cap is marked with DIESEL on it and is unlocked using the vehicle diesel key. The fuel filling location is located next to the passenger door. Simply open the lid using your hands, then use the diesel key to unlock. Turn the key anticlockwise to unlock the cap.
Once filled with diesel, place the fuel cap on the inlet and turn the key clockwise to lock it.



IMPORTANT INFORMATION
The vehicle accepts diesel fuel only. If you fill the vehicle with unleaded petrol, water or AdBlue, please do not start the engine and call Star RV Roadside Assistance immediately.

AdBlue

Every 2,500 km the vehicle will require AdBlue to be refilled.
If the AdBlue level is low, a warning light or symbol illuminates on the dashboard and a message advises you to top up the AdBlue tank.
Please find the nearest fuel station or auto shop which supplies AdBlue and refill the vehicle with AdBlue as soon as possible. Failure to refill the AdBlue tank will result in the vehicle going into limp mode. The AdBlue filler cap is below the diesel filler cap.



IMPORTANT INFORMATION
AdBlue is NOT a diesel fuel additive. DO NOT add or mix with diesel under any circumstances.

ADDITIONAL TIPS
If the AdBlue warning light appears on your dashboard, please check the AdBlue. If the tank has been recently topped up, the warning may be a false reading caused by overfilling and will clear automatically as the vehicle uses the fluid.

Jack & spare tyre

Stop the vehicle in park in a safe, flat and stable area. The tools can be found under the front passenger seat.



To access them, pull the compartment cover off from beneath the seat. You will need to pull the lever here down to be able to take the cover off.



There is a lock which secures the toolbox into place under the seat. Turn the lock to release the tools from under the seat.



Next, on the toolbox push the front tab in and lift the upper shell off, as shown in the image below.



The spare tyre is located at the back of the vehicle, underneath. To access it, use the release mechanism (use the rod which is in the tool box) to connect it into the hole (shown below), then turn the rod to lower the tyre to access it.



IMPORTANT INFORMATION
Ensure you follow all safety instructions when handling the spare tyre.

Additional vehicle information

Type	Detail
Tyre size	225/75R16C
Tyre pressure	75 PSI
Oil type	C2-03 0W30
Coolant type	Red Coolant (any brand)
Car Battery	NPCISS110H

IMPORTANT INFORMATION
Service stations may not have the correct oil type for our fleet.
It is recommended to visit a mechanic who will most likely have the correct oil type you need to purchase if an oil top up warning comes on.

VEHICLE RETURN

Vehicle Return

Get ready for vehicle drop off

Please return your vehicle at the time listed in your booking confirmation.

> **!** **IMPORTANT INFORMATION**
> Sorry, no after-hours drop-offs. We want to make sure everything's safely checked back in.

Before you say goodbye to your vehicle

- Top up the fuel and gas (if applicable based on your confirmed booking date) to the same levels as when you picked up.
- Remove all your items, including any food or gear from cupboards, drawers, or storage.
- Tidy up the vehicle — a quick clean, dishes done, and rubbish taken out.
- If you confirmed your booking on or before 30th April 2026, you will need to ensure you return vehicle to us with your LPG gas bottles full.
- If you confirmed your booking on or after the 1st May 2026, you can return your vehicle with empty LPG gas bottles, because you have paid for this with the LPG Fee applied to your booking.
- If your vehicle has a toilet cassette and grey water tank, please empty them at an authorised dump station before you return.
- Then just hand the keys back to our friendly team and you're all set!